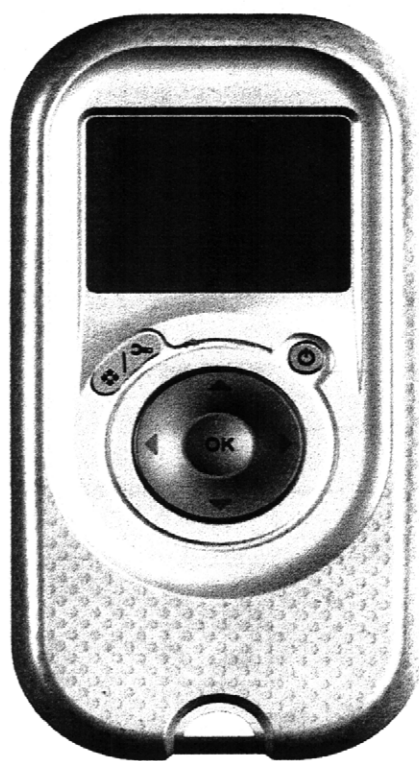 


## Klever Kleena Remote Control Unit

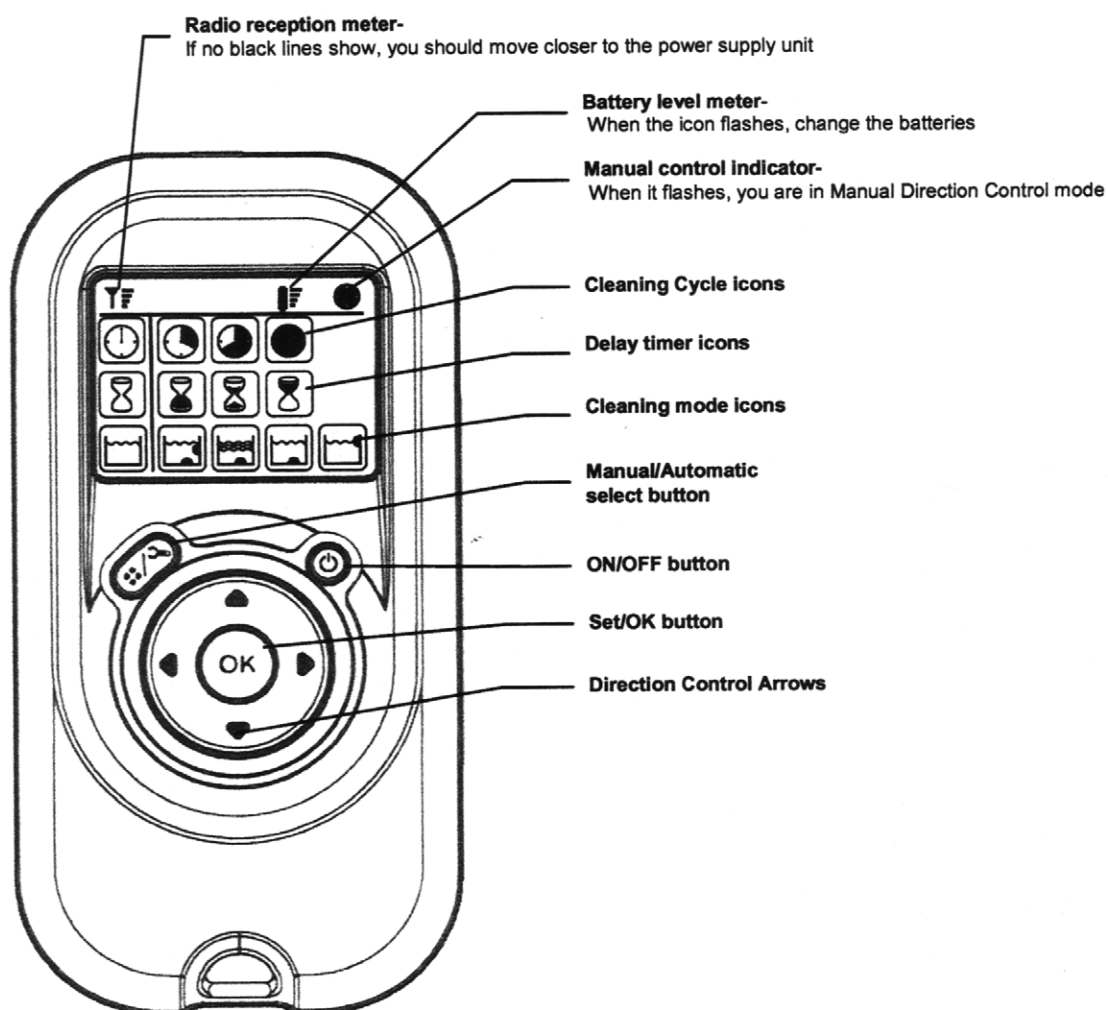


8151290

## The Remote Control Unit (RCU)










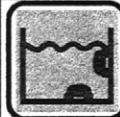



The RCU offers two operation modes - Automatic mode and Manual direction control mode.  
In Automatic mode, all cleaning parameters can be changed.  
In Manual direction mode, the Pool Cleaner direction can be controlled manually.

### The Control Panel of the Remote Control Unit



Setting the Automatic Mode

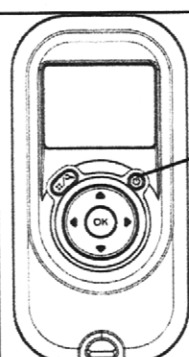
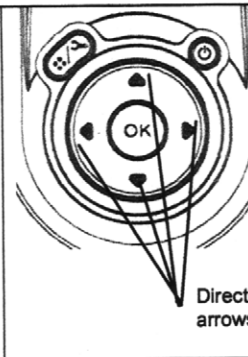
To Change the Automatic Mode settings  
First press the Manual/Automatic select button, then set according to the following table:

 <b>Cleaning cycle indicator</b> This determines the cleaning cycle time. The RCU allows you to choose between the following options.	 <b>Fast</b>  2 hour cycle	 <b>Efficient (Default setting)</b>  3 hour cycle for everyday use	 <b>Extra</b>  4 hour cycle	
 <b>Delay Time indicator</b> This determines when the pool cleaner starts to work. A delay allows the dirt to settle to the bottom of the pool.	 <b>Immediate start (Default setting)</b>	 <b>One Hour delay</b>	 <b>Two Hours delay</b>	
 <b>Cleaning action indicator</b> Allowing you to choose from the following options.	 <b>Standard</b> Floor and wall cleaning. <b>(Default setting)</b>	 <b>Ultra-clean</b> Stronger suction and slower movement.	 <b>Floor only</b> Cleans only the floor and coves.	 <b>Walls Only</b> Cleans walls and waterline only.

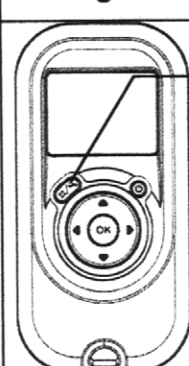
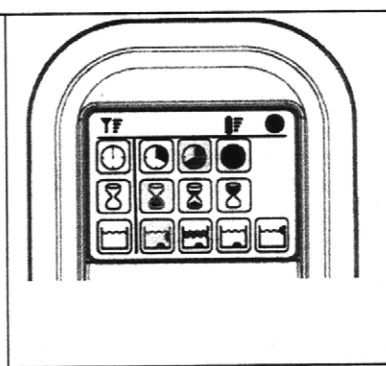
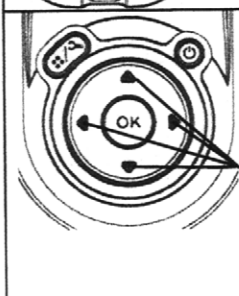
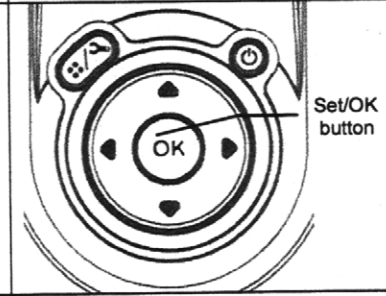
**Note:**

- After 2 minutes, if no button is pressed, the Remote Control Unit will shut-down and the Pool cleaner will continue to work in the previous settings
- When the "Ultra-Clean" and "Walls Only" options finish their cycles, the RCU will return to default settings.

## Manual Direction Control Mode

 <p>On/Off button</p>	<ol style="list-style-type: none"> <li>1. Press the ON/OFF button once - The RCU will start-up in Manual Direction control mode</li> <li>2. To manually control the direction of the cleaner, utilise the Direction control arrows (see right)</li> </ol>	 <p>Direction control arrows</p>
---	---	--

## Exiting Manual Direction Control Mode and set the Automatic Mode

 <p>Manual/Automatic Select button</p>	<ol style="list-style-type: none"> <li>1. To exit the Manual direction control mode press the Manual/Automatic Selection button ONCE only</li> <li>2. The Digital screen will light up and three rows of function icons will show in default mode</li> </ol>	
 <p>Direction control arrows</p>	<ol style="list-style-type: none"> <li>1. To change the parameters press the up or down arrows. To choose the parameter settings use the right or left arrows.</li> <li>2. When you reach the required function press the Set/OK button</li> </ol>	 <p>Set/OK button</p>